

<b>(Ref.No.) Description</b>	<b>Function</b>
(1) Gear position indicator (orange)	Indicates the engaging transmission gears.
(2) Left turn signal indicator (green)	Flashes when the left turn signal operates.
(3) Neutral indicator (green)	Lights when the transmission is in neutral.
(4) PGM-FI malfunction indicator lamp (MIL) (red)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON. If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.