


## STARTING THE ENGINE

### WARNING

- \* *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.*
- \* *Do not try to start the engine with the transmission in gear. You may injure yourself or damage the vehicle.*

### Starting Procedure


1. Select a level surface and set the parking brake before starting the engine.
2. Turn the fuel cap lever (1) and fuel valve (2) ON.
3. Move the ignition switch (3) to RUN.

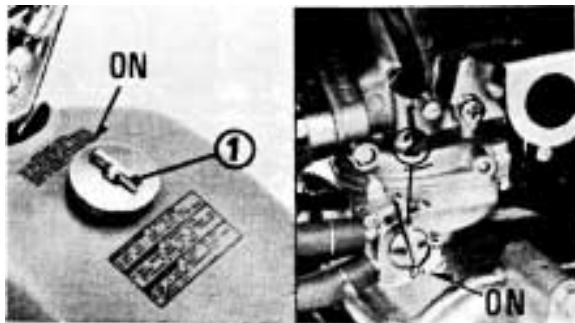

(1) Cap lever

(2) Fuel valve

4. Select the Posi-Torque range. If necessary, roll the ATC forward to engage the sub-transmission gears.
5. Make sure that the transmission is in neutral by lifting the shift lever and checking that the neutral indicator (4) is at N.
6. Raise the choke lever (5) completely and open the throttle (6) slightly.
7. Pull the recoil starter (7) slightly until compression is felt. With the engine against compression, pull the starter rope briskly.

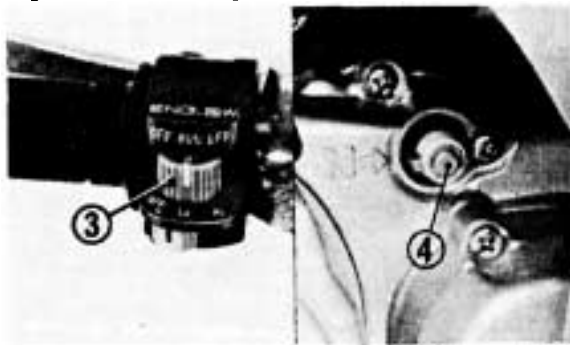

(3) Ignition switch

(4) Neutral indicator