

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
FUEL STRAINER	C: (EVERY YEAR)		33
THROTTLE OPERATION	I	I	43
DRIVE CHAIN	I	I	44
* BRAKE SHOES	I: (EVERY YEAR)		—
BRAKE SYSTEM	I	I	42
* CLUTCH	A	A	41
* SPARK ARRESTER		C	46
ALL NUTS, BOLTS, FASTENERS	I	I	—
LIGHTING EQUIPMENT	I	I	—
TIRES	I	I	14
* STEERING HEAD BEARING	A: (EVERY YEAR)		—