

install the high altitude main jet (No. 78). Reinstall the float chamber.

6. Install the carburetor. Assure that the drain screw is turned fully clockwise. Turn the fuel valve ON.
7. Start the engine. Adjust the idle speed (3) and pilot screw (2) (page 34).

**NOTE:**

- \* Adjust the idle speed and pilot screw at high altitude to ensure proper high altitude operation.

**Removal: Below 6,500 ft (2,000 m)**

1. Follow installation steps 1-4.
2. Reinstall the original No. 85 main jet.
3. Reinstall the carburetor. Adjust the idle speed and pilot screw (page 34).

**NOTE:**

- \* Adjust the idle speed and pilot screw at low altitude to ensure proper low altitude operation.



(2) Pilot screw

(3) Throttle stop screw