


AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC110 is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the mounting bolts (1) and the air cleaner tube clamp (2).
2. Loosen the air cleaner setting nut (3), and withdraw the filter from the housing.
3. Remove the filter element, wash it in non-flammable or high flash point solvent. Allow it to dry thoroughly.
4. Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.
5. Reassemble by reversing the disassembly sequence.

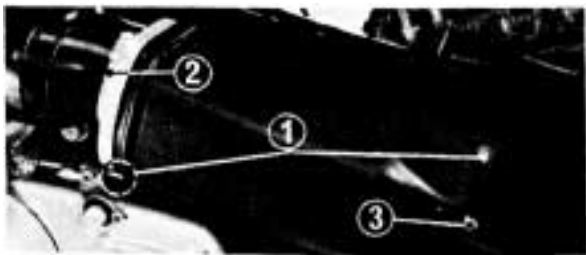

(1) Mounting bolts
(2) Tube clamp


(3) Element setting nut

CAUTION:

- * Do not pinch the air intake tube between the air cleaner case and frame when installing the air cleaner case.

WARNING

- * Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.

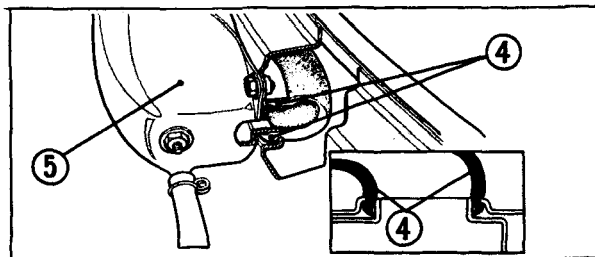

(4) Air intake tube

(5) Air cleaner case