

## TRANSPORTING

1. Turn the fuel cap lever and fuel valve to OFF.
2. Place the carburetor drain tube in a suitable container.
3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.

### WARNING

- \* *Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*
- \* *Never incline the machine with the front wheel up or rest it on its side without draining the fuel. Fuel vapor or spilled fuel may ignite.*

4. After draining, turn the drain screw clockwise until tight.

### NOTE:

- \* Be sure the fuel drain is closed (screw turned clockwise) before refueling the ATC.
- \* It is unnecessary to drain the engine oil from the crankcase, as no appreciable oil leakage will occur when the ATC is rested on its side.

5. Remove the battery, disconnecting the negative (-) terminal first, then the positive (+) terminal. When reinstalling the battery, connect the positive (+) terminal first, then the negative (-) terminal.
6. If wheel removal is required when transporting, follow the procedures on the following pages.