

# CONTENTS

	Page		Page
ATC SAFETY . . . . .	1	Clutch . . . . .	41
DESCRIPTION . . . . .	2	Brakes . . . . .	42
Parts Location . . . . .	2	Throttle Cable . . . . .	45
Serial Numbers . . . . .	4	Drive Chain . . . . .	46
Parts Function . . . . .	5	Cam Chain . . . . .	47
Fuel . . . . .	9	Spark Arrester . . . . .	48
Engine Oil . . . . .	11	STORAGE . . . . .	49
Tires . . . . .	13	TRANSPORTING . . . . .	50
OPERATION . . . . .	15	OPTIONAL PARTS . . . . .	53
Pre-ride Inspection . . . . .	15	SPECIFICATIONS . . . . .	55
Starting the Engine . . . . .	16	WIRING DIAGRAM . . . . .	56
Break-in . . . . .	19		
Riding . . . . .	20		
Parking . . . . .	28		
MAINTENANCE . . . . .	29		
Maintenance Schedule . . . . .	29		
Tool Kit . . . . .	31		
Engine Oil . . . . .	32		
Fuel Filter . . . . .	33		
Carburetor . . . . .	34		
High Altitude . . . . .	35		
Spark Plug . . . . .	37		
Air Cleaner . . . . .	38		
Valves . . . . .	39		