


install the high altitude main jet (No. 92) (1). Reinstall the float chamber.

6. Remove the jet needle (2) from throttle valve (3). Change the position of the E-clip (4) from the 2nd notch to the 1st notch.

Reinstall the jet needle into the throttle valve.

7. Slide the throttle valve into the carburetor and tighten the cap. Install the carburetor. Make sure the drain screw is turned fully clockwise and turn the fuel valve ON.
8. Start the engine. Adjust the idle speed and pilot screw (page 34).

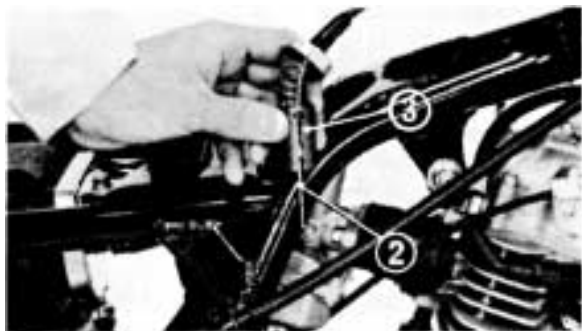

(2) Jet needle

(3) Throttle valve

NOTE:


- * Adjust the idle speed and pilot screw at high altitude to ensure proper high altitude operation.

Removal: Below 6,500 ft (2,000 m)

1. Follow installation steps 1-4.
2. Reinstall the original No. 100 main jet.
3. Change the jet needle clip back to the 2nd notch.
4. Reinstall the carburetor. Adjust the idle speed and pilot screw (page 34).

NOTE:

- * Adjust the idle speed and pilot screw at low altitude to ensure proper low altitude operation.

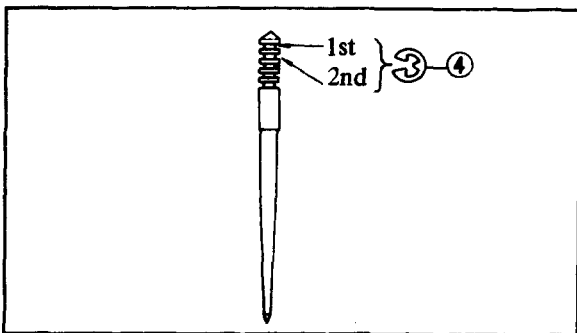

(4) E-clip