

## BRAKES

### Front Brake Lever


Measure the distance the brake lever moves before the brake starts to take hold.

Free play, measured at the tip of the front brake lever (1), should be within 15–20 mm (5/8–3/4 in.).

If adjustment is necessary, turn the adjusting nut.

#### NOTE:

- \* Make sure the cut-out on the adjusting nut (2) is seated on the brake arm pin (6).

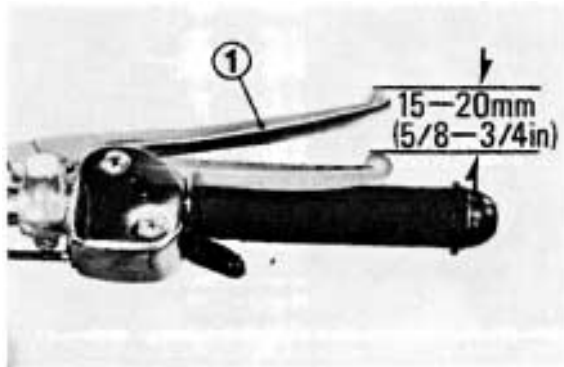

(1) Front brake lever

### Other Checks:


Check the brake cable for kinks or signs of wear that could cause sticking or failure. Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Make sure the brake arm, spring, and fasteners are in good condition.

### Wear Indicator:

When the brake is applied, an arrow (3), attached to the brake arm (4), moves toward a reference mark (5) on the brake panel.

If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

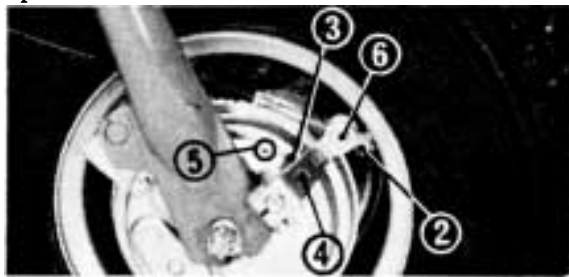

(2) Front brake adjusting nut (3) Arrow  
(4) Brake arm (5) Reference mark  
(6) Brake arm pin