


## SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon.

### WARNING

- \* *The exhaust system becomes VERY HOT even after short periods of engine operation.*
  - \* *To avoid fire hazards, DO NOT perform this maintenance in the vicinity of flammable materials.*
1. Remove the spark arrester bolts (1) and slide the arrester (2) out.
  2. Clean the arrester of accumulated carbon.
  3. Start the engine, and purge accumulated carbon from the system by momentarily revving up the engine several times.
  4. Stop the engine and allow the exhaust pipe to cool.
  5. Reinstall the spark arrester with the bolts.

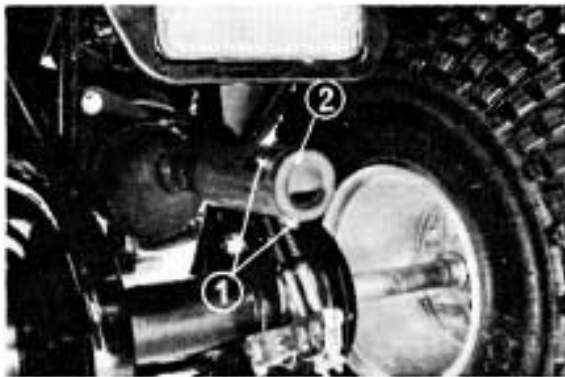

(1) Spark arrester bolts (2) Spark arrester