

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace L: Lubricate A: Adjust			INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	FUEL LINE		I: (EVERY YEAR)		39
*	FUEL FILTER		C:(EVERY YEAR)		39
	THROTTLE OPERATION		I	I	53
	DRIVE CHAIN	NOTE (2)	I.L	I.L	54
	CHAIN SLIDER		I	I	55
	FRONT FORK OIL/AIR		R: (EVERY YEAR)		16
*	SUSPENSION			I	—
	SWINGARM BEARING		I.L	I.L	—
*	FRONT/REAR BRAKE PADS	NOTE (3)	I: (EVERY YEAR)		51
	FRONT/REAR BRAKE FLUID		I	I R: (EVERY YEAR)	49
	FRONT/REAR BRAKE SYSTEM		I	I	49
*	CLUTCH		A	A	47
*	SPARK ARRESTER			C	57
	ALL NUTS, BOLTS, FASTENERS		I	I	—
	LIGHTING EQUIPMENT		I	I	—
	TIRES		I	I	14
*	STEERING HEAD BEARING		A: (EVERY YEAR)		—
**	REAR BRAKE PIVOTS		I: (EVERY YEAR)		—

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first.
(2) Service more frequently when riding in dusty areas, sand or snow.
(3) Service more frequently after riding in very wet or muddy conditions.