


Brake Pads:

Brake pad wear will depend upon the severity of usage and riding conditions. The pads will wear faster in wet or muddy conditions. Inspect the pads visually during all regular service intervals to determine the pad wear. If either pad wears to the wear indicator (1), both pads must be replaced. See your authorized Honda dealer for this service.

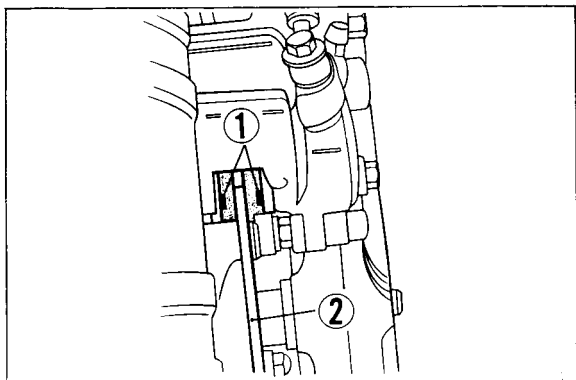


(1) Wear indicator (2) Brake disc

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hose and fittings.

The rear brake pedal pivot must be inspected according to the Maintenance Schedule.

See your authorized Honda dealer for this service.

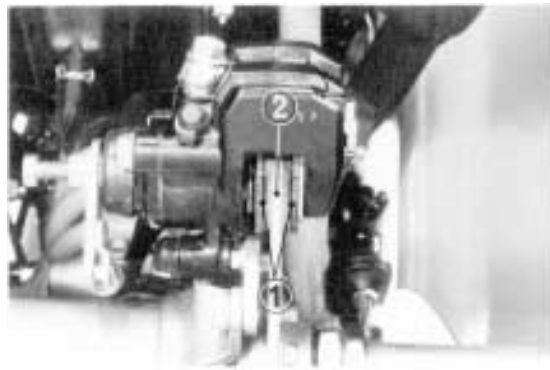

(1) Wear indicator (2) Brake disc