

TRANSPORTING

1. Turn the fuel valve OFF.
2. **Remove the drain screw from the carburetor and drain the gasoline into a suitable container.**

WARNING

- * *Never transport the machine on its side or with the front wheel straight up unless all fuel has been drained.*
3. Reinstall the drain screws.

NOTE:

- * Be sure the drain screw is tightened.
- * If wheel removal is required when transporting, follow the procedures on the following pages.