


PARTS FUNCTION

The controls next to the left handlebar grip are:

Ignition Switch

The three position ignition switch (1) is next to the left handlebar grip. In RUN, the engine will operate. In either OFF position the engine will not operate.

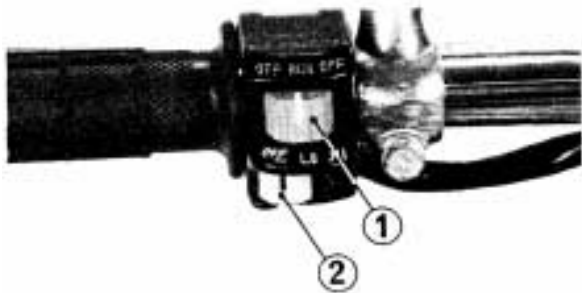

- (1) Ignition switch
- (2) Headlight switch

Headlight Switch

The headlight switch (2) is under the ignition switch. Its operating positions are as follows:

Position	Function
OFF	Headlight is off.
LO	Headlight is on low beam.
HI	Headlight is on high beam.