

### Low Air Temperature

10°C (50°F) or below

1. Follow steps 1–5 under Normal Air Temperature.
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it will idle smoothly with the choke knob pushed down all the way to Fully Open (C).


### **CAUTION:**

- \* *Extended use of the choke may impair piston and cylinder wall lubrication.*
- \* *Do not race the engine during the warm-up period. Racing a cold engine wastes fuel and increases engine wear.*

### **Recoil Starting**

If the engine does not start with the electric starter, use the recoil starter.

1. Raise the decompressor lever (1) up to the DE-COMP position.
2. Pull the recoil starter (2) briskly.

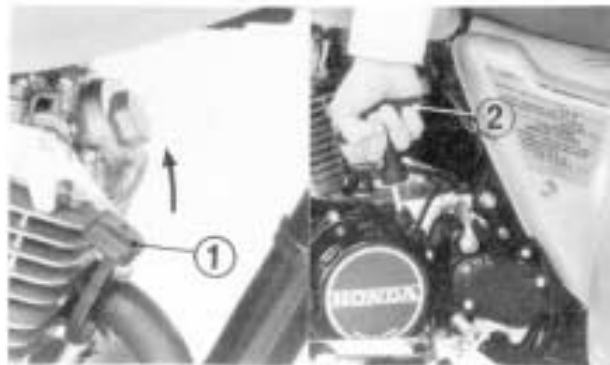

(1) Decompressor lever (2) Recoil starter