## STARTING THE ENGINE

## **WARNING**


- \* Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.
- \* Do not try to start the engine with the transmission in gear. You may injure yourself or damage the vehicle.

(1) Vent lever

(2) Fuel valve

## Preparation

- 1. Select a level surface and lock the parking brake (page 13) before starting the engine.
- 2. Turn the fuel cap vent lever (1) and fuel valve (2) to ON.
- 3. Make sure the engine stop switch (3) is at RUN.

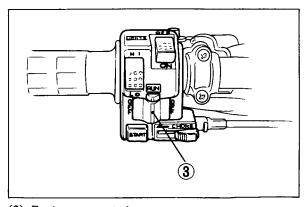

(3) Engine stop switch