

3. Remove the carburetor by removing the nuts and the screw on the band. Remove the carburetor.
4. Remove the float chamber.
5. Remove the standard main jet (1) and install the high altitude main jet. Reinstall the float chamber.
6. Install the carburetor. Make sure the drain screw is turned fully clockwise and turn the fuel valve ON.
7. Start the engine. Adjust the idle speed (page 47).

**NOTE:**

- \* Adjust the idle speed at high altitude to ensure proper high altitude operation.

**Removal: Below 6,000 ft (1,800 m)**

1. Follow installation steps 1-4.
2. Reinstall the standard main jet.
3. Reinstall the carburetor.  
Adjust the idle speed (page 47).

**NOTE:**

- \* Adjust the idle speed at low altitude to ensure proper low altitude operation.