

 **WARNING**

\* *Do not remove the radiator cap when the engine is hot. The coolant is under pressure and severe scalding could result. Only remove cap when drain coolant.*

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized dealer for repair.