

To adjust rebound damping:

The rebound damping adjuster is located at the right bottom of the shock absorber.

To adjust, turn the rebound damping adjuster (3) to the desired position, and test ride to see if adjustment is necessary. See page 22.




(3) Rebound damping adjuster

To adjust compression damping:

The compression damping adjuster (4) is located on the shock reservoir and has a punch mark on its outer surface. When the punch mark is aligned between the "S" (Soft) and "H" (Hard) marks on the reservoir body, the compression damping is in the standard position.

It is best to start with the adjuster in the standard position and test ride to see if adjustment is necessary. See page 22.

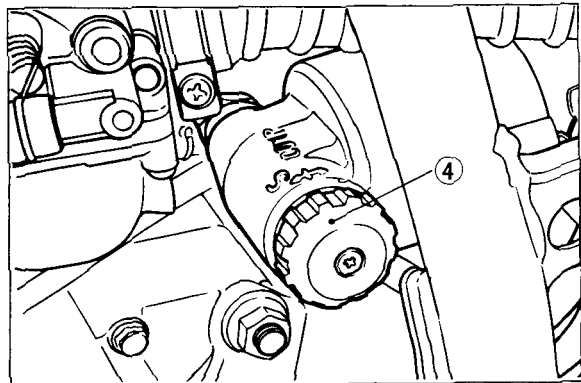

(4) Compression damping adjuster