

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust L: Lubricate		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	FRONT AND REAR BRAKE SYSTEM	I	I	—
*	CLUTCH	A	A	48
*	SPARK ARRESTER		C	57
	ALL NUTS, BOLTS, FASTENERS	I	I	—
	LIGHTING EQUIPMENT	I	I	—
	TIRES	I	I	18
*	STEERING HEAD BEARING	A: (EVERY YEAR)		—

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first.
(2) Service more frequently when riding in dusty areas, sand or snow.
(3) Service more frequently after riding in very wet or muddy conditions.