


THROTTLE CABLE

Inspect throttle cable condition and operation. The cable must not bind or impair smooth operation of the throttle lever in any steering position. Replace the cable if it has become worn or kinked. Lubricate the cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Free play, measured from the forward edge of the throttle lever (1) should be maintained at 3–8 mm (0.12–0.31 in). The cable adjuster (3) is located near the throttle lever. Loosen the lock nut (2) and turn the adjuster to obtain the correct free play.

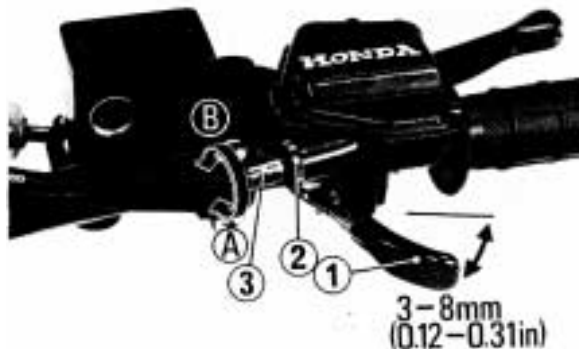

- | | |
|--------------------|------------------------|
| (1) Throttle lever | (A) Decrease free play |
| (2) Lock nut | (B) Increase free play |
| (3) Cable adjuster | |