

TRANSPORTING

1. Turn the fuel valve OFF.
2. Remove the drain bolt to drain the fuel from the carburetor.
3. Reinstall the drain bolt.

WARNING

- * *Never transport the machine on its side or with the front wheel straight up unless all fuel has been drained.*

NOTE:

- * Be sure the drain bolt is tightened.
- * If wheel removal is required when transporting, follow the procedures on the following pages.