


## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1).
3. Remove the wheel.

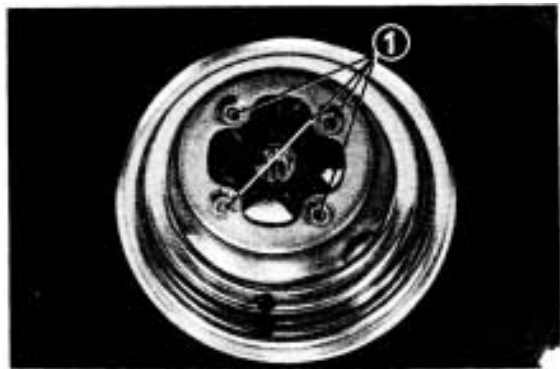

(1) Wheel nuts

## Installation:

Reinstall the rear wheel and tighten the wheel nuts (1) in a cross-pattern, torquing them to 60–70 N·m (6.0–7.0 kg·m, 45–50 ft·lb).

## **⚠ WARNING**

*\* If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*