



SERIAL NUMBER LOCATIONS

The frame serial number ① is stamped on the left of the steering head pipe.

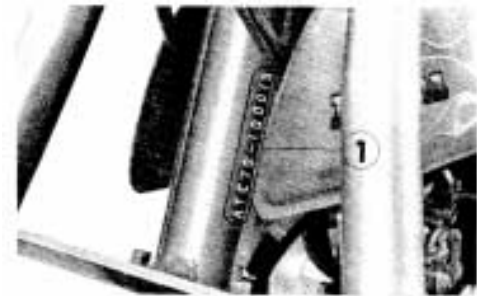

① Frame serial number

The engine serial number ② is stamped on the crankcase just above the step bar attaching point.

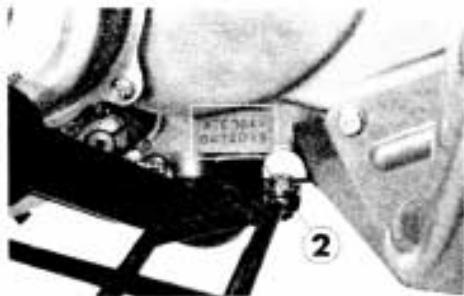

② Engine serial number