



The pedal is depressed to upshift and is raised to downshift.

With the transmission in neutral, depress the pedal to shift into low gear. 2nd, 3rd and 4th (top) gear are selected in sequence each time the pedal is again depressed.

Each time the pedal is raised, the next lower gear in sequence is engaged until the neutral position is reached.

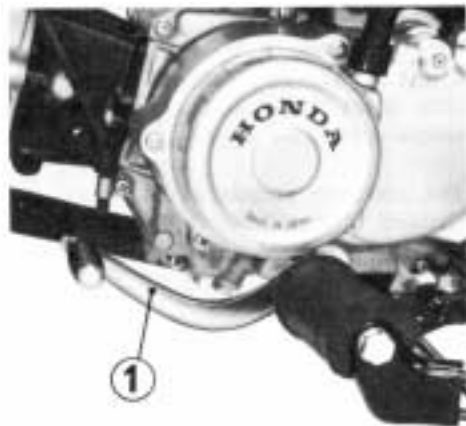

① Gear change pedal

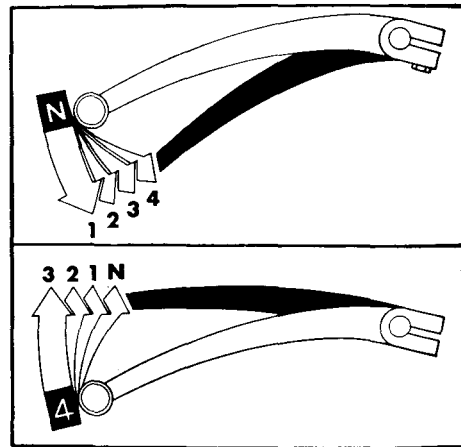

Shifting sequence