

CONTENTS

| | | | |
|--------------------------------------|----|-----------------------------------|----|
| ATC SAFETY | 1 | Speed Limiter | 16 |
| SERIAL NUMBER LOCATIONS | 4 | Step Guard | 17 |
| DESCRIPTION | 5 | Tires | 18 |
| COMPONENT FUNCTION | 7 | PRE-RIDE INSPECTION | 19 |
| <i>Ignition Switch</i> | 7 | STARTING THE ENGINE | 20 |
| Brake Lever | 7 | BREAK-IN PROCEDURE | 21 |
| Gearshift Pedal | 8 | RIDING THE HONDA ATC | 23 |
| Neutral Indicator | 9 | Turning Maneuvers | 24 |
| Choke Lever | 10 | Climbing Hills | 28 |
| Fuel Valve | 11 | Descending Hills | 30 |
| Fuel Tank | 12 | Traveling Slopes | 31 |
| Fuel Drain | 13 | Riding Through Water | 32 |
| Oil Recommendation | 14 | Tire Care | 33 |
| Engine Oil Level | 15 | MAINTENANCE | 34 |
| Throttle Lever | 15 | Maintenance Schedule | 34 |
| | | Tool Kit | 36 |