

## AIR CLEANER MAINTENANCE

The air filter element accumulates dust and must be cleaned periodically. If the ATC 70 is ridden in unusually dusty areas, the filter element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the bolt ① and air cleaner cover ②.
2. Remove the filter element from the air cleaner case.
3. Remove air filter element tube ⑤ and support ④ from filter element ③.
4. Wash the filter element in non-flammable or high flash point solvent and allow to dry thoroughly.
5. Soak the filter element in clean gear oil (SAE 80 ~ 90), then squeeze out the excess.


6. Reassemble the filter in the reverse order of disassembly.

### WARNING

Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.



① Bolt    ② Air cleaner cover

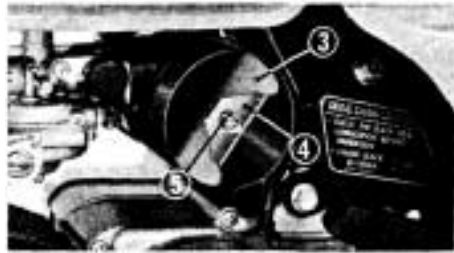

③ Filter element    ⑤ Filter element tube  
④ Support