


## TRANSPORTING THE ATC

### FUEL

1. When transporting your ATC, turn the fuel valve and fuel vent valve OFF to prevent fuel leakage.

**WARNING** GASOLINE IS FLAMMABLE, AND EXPLOSIVE UNDER CERTAIN CONDITIONS. ALWAYS STOP THE ENGINE, AND DO NOT SMOKE OR ALLOW FLAMES OR SPARKS NEAR THE ATC WHEN DRAINING OR REFUELING.

2. Place the drain tube in a suitable gasoline container.
3. With the fuel valve and fuel vent valve OFF, turn the carburetor drain screw counterclockwise.
4. When all the fuel has drained, retighten the screw.

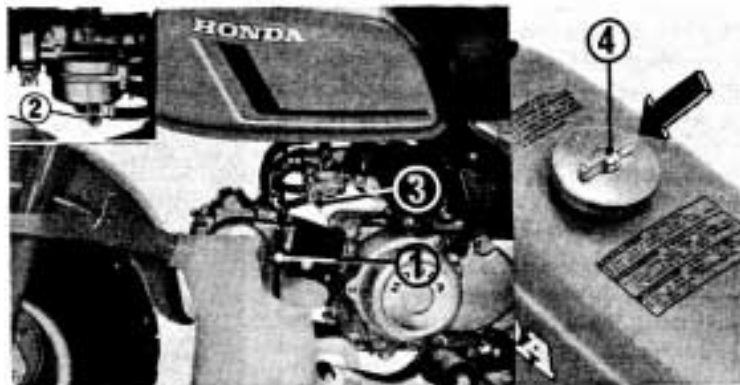

- ① Drain tube  
② Drain screw

- ③ Fuel valve  
④ Fuel vent valve