


## COMPONENT FUNCTION

### IGNITION SWITCH


The ignition switch ① is on the right handlebar. Turn the switch to ON when starting the engine and to OFF to stop the engine.

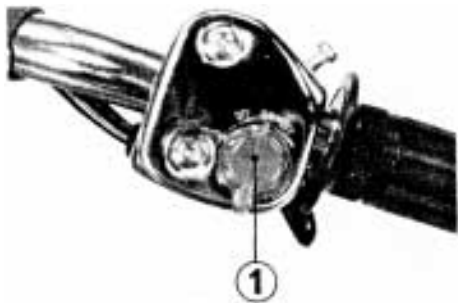

① Ignition switch

### BRAKE LEVER/PARKING BRAKE

The brake lever ① is on the left handlebar and applies the brake to the rear wheels only. The brake lever free play should be 15 ~ 20 mm (5/8 ~ 3/4 in) at the tip of the lever.

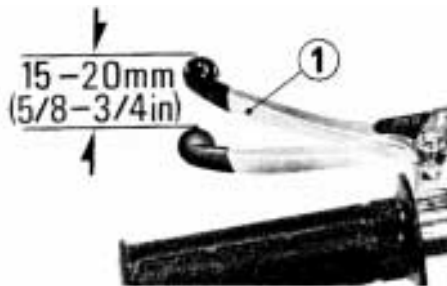


① Brake lever

The rear brake lever has the added feature of a lock ② which allows the lever to be used as a parking brake. (note use in photo).

Pull the brake lever back and lock it with the lock. Always apply the parking brake when parking on a hill.

#### NOTE:

\* Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

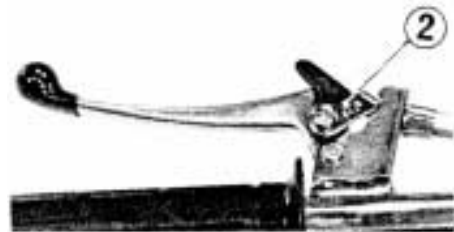

② Parking brake lock