

FUEL STRAINER MAINTENANCE

The fuel strainer is on the left side of the carburetor body. The fine mesh screen of the strainer prevents dirt from entering the carburetor passages.

Dirt which accumulates at the filter must be removed periodically, or the fuel flow will eventually be restricted.


WARNING

- Gasoline is extremely flammable and explosive under certain conditions.
- Gasoline is harmful or fatal if swallowed. Avoid repeated or prolonged contact with skin or breathing of vapor. Keep out of reach of children. If gasoline is swallowed, do not induce vomiting. Call a physician immediately.

1. Turn the carburetor fuel valve to OFF.
2. Remove the two screws which retain the fuel valve, and remove the fuel valve.
3. Remove the neoprene O-ring ② and the filter screen ①
4. Wash the filter screen in non-flammable or high flash point solvent.

WARNING

- * Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.
5. Reassemble in the reverse order of disassembly.
 6. Turn the carburetor fuel valve ON and check for leaks at the fuel strainer cover. Correct if necessary.

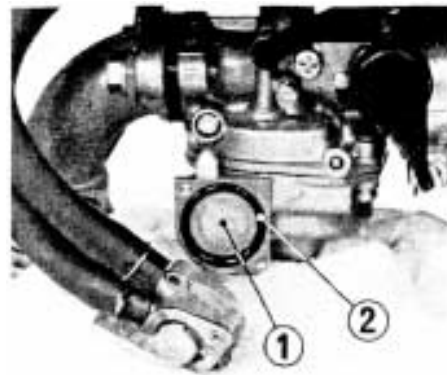

① Filter screen ② O-ring seal