

TRANSPORTING THE ATC (Continued)

Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.

Installation Note:

When reinstalling the rear wheels, make sure to torque the wheel nuts to 19–25 N·m (1.9–2.5 kg·m, 14–18 ft·lb).



① Wheel nuts