

## CARBURETOR ADJUSTMENT


### NOTE:

Before making adjustments to the carburetor, be sure the ignition system is functioning properly and the engine has good compression. Do not attempt to compensate for other faults by carburetor adjustment.

Perform the carburetor adjustment as specified in the maintenance schedule.

To adjust the carburetor.

1. Start the engine and warm it up to operating temperature.
2. Set the idle speed to 1,500rpm with the throttle stop screw ①.

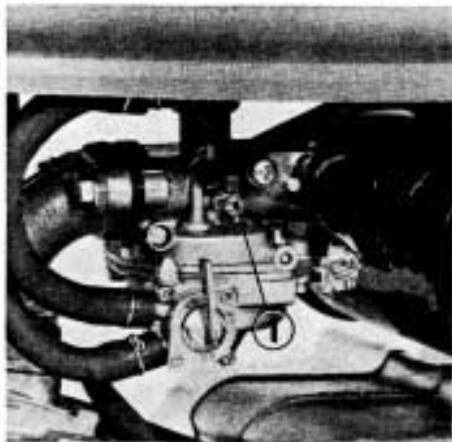

① Throttle stop screw