

TRANSPORTING THE ATC (Continued)


REMOVING THE FRONT WHEEL

If limited carrying space requires removal of the front wheel, follow this procedure:

1. Remove the cotter pin ① securing the front axle nut.
2. Remove the washer ③ and axle nut ②.
3. Pull out the axle and then remove the front wheel.

NOTE:

Cover the wheel hub as soon as the axle has been removed to prevent the entry of dirt.

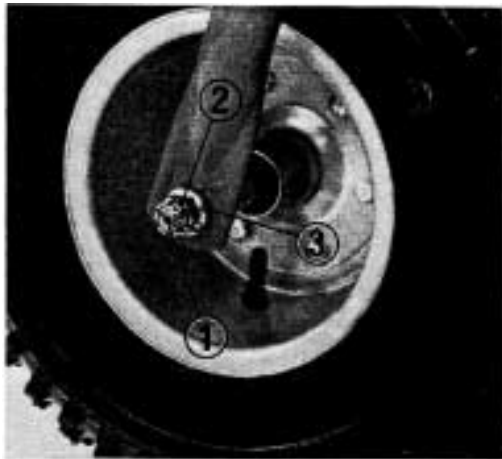

① Cotter pin ② Axle nut ③ Washer