


## Air Cleaner

(Refer to the maintenance precautions on page 48).

The air cleaner should be serviced at regular intervals (page 43). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the leg shield (1) by removing the left and right screws (2) and bolts (3).
2. Pull out the leg shield.

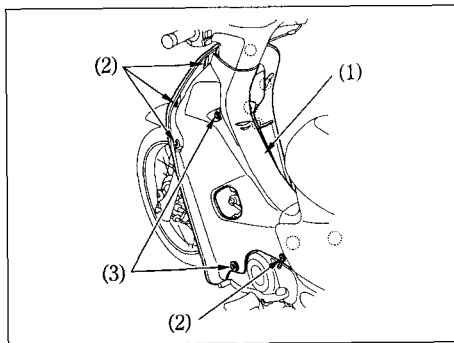

- (1) Leg shield
- (2) Screws
- (3) Bolts