


3. Remove the air cleaner cover (4) by removing four screws (5).
4. Remove the air cleaner element (6).
5. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.

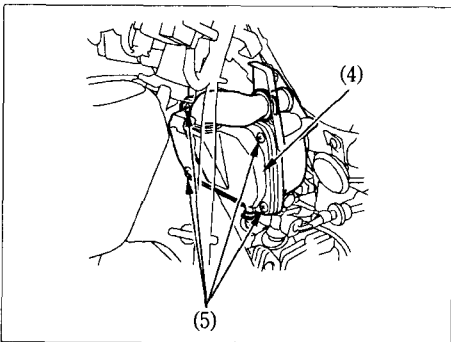


(4) Air cleaner cover
(5) Screws

⚠ WARNING

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

6. Soak the element in gear oil (SAE 80-90) and squeeze out the excess.
7. Install the removed parts in the reverse order of disassembly.

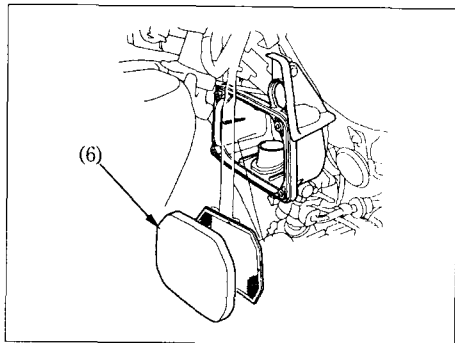

(6) Air cleaner element