

 **WARNING**

**Never use petrol or low flash point solvents for cleaning the fuel strainer screen. A fire or explosion could result.**

4. Reinstall the fuel strainer screen and new O-rings into the fuel cock. Hand tighten the fuel filter bolt making sure the new O-rings are in place. Then torque to specification:

Torque: 4 N·m (0.4 kgf·m, 2.9 lbf·ft)

5. After installing, turn the fuel cock ON and check that there are no fuel leaks.