



## Rear Wheel Removal (Refer to the maintenance precautions on page 48).

1. Place the motorcycle on its center stand.
2. Remove the rear brake adjusting nut (1).  
Disconnect the brake rod (2) from the brake arm (3).

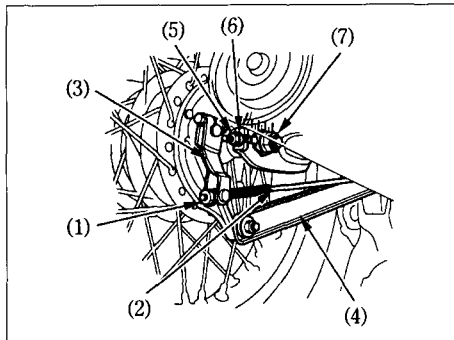

- |                   |                    |
|-------------------|--------------------|
| (1) Adjusting nut | (5) Lock nuts      |
| (2) Brake rod     | (6) Adjusting nuts |
| (3) Brake Arm     | (7) Axle nut       |
| (4) Stopper arm   |                    |

3. Disconnect the brake stopper arm (4) from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.
4. Loosen the drive chain lock nuts (5) and adjusting nuts (6).
5. Remove the axle nut (7) and pull out the rear axle (8).  
Push the wheel forward and remove the drive chain from the rear sprocket.
6. Pull out the wheel from the swingarm.

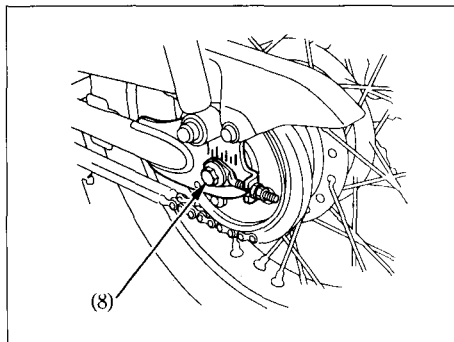

- (8) Axle