

Fuse Replacement

(Refer to the maintenance precautions on page 48).

The fuse holder (1) is attached to the battery holder.

The specified fuse is follows: 10A

The spare fuse (2) is on the battery cover (3).


When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.

ATTENTION

- Turn the ignition switch OFF before checking or replacing fuse to prevent accidental short-circuiting.
- Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse, could cause damage to the electrical system and even start a fire.



Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

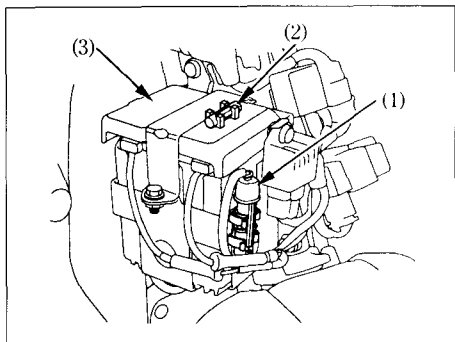

- (1) Fuse holder
- (2) Spare fuse
- (3) Battery cover