

SIDE COVER

The left side cover must be removed for air cleaner maintenance and to access the documents.


The right side cover must be removed for battery and fuse maintenance.

Side cover removal:

1. Remove the screws (1).
2. Carefully pull the side cover (2)(3) out until the two prongs (4) are clear.

Side cover installation:

1. Install the side cover by insert the two prongs (4).
2. Set the screws (1).

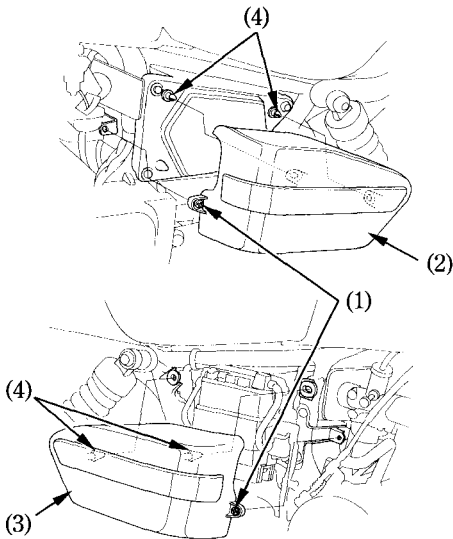

(1) Screws

(2) Left side cover

(3) Right side cover

(4) Prongs