

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (3)]						REFER TO
			600 mi (1,000 km)	4,000 mi (6,400 km)	8,000 mi (12,800 km)	12,000 mi (19,200 km)	16,000 mi (25,600 km)	20,000 mi (32,000 km)	
DRIVE CHAIN		EVERY	I, LEVEY 300 mi (500 km)						Pages 132
BATTERY		MONTH	I	I	I	I	I	I	Pages 154
BRAKE FLUID		MONTH I 2 YEARS*R	I	I	I	*R	I	I	Pages 140
BRAKE PAD WEAR				I	I	I	I	I	Page 142
BRAKE SYSTEM			I	I	I	I	I	I	
* BRAKE LIGHT SWITCH			I	I	I	I	I	I	
* HEADLIGHT AIM			I	I	I	I	I	I	
CLUTCH			I	I	I	I	I	I	Pages 130
SIDE STAND				I	I	I	I	I	Page 144
* SUSPENSION			I	I	I	I	I	I	
* NUTS, BOLTS, FASTENERS			I	I	I	I	I	I	
** WHEELS			I	I	I	I	I	I	
** STEERING HEAD BEARING			I		I		I		

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) Service more frequently when riding in dusty areas.

(2) Service more frequently when riding in rain or at full throttle.

(3) For higher odometer readings, repeat at the frequency interval established here.