



Rear Wheel Installation

1. Install the side collars into the left and right side wheel hub.
2. Tighten the rear axle nut and brake stopper arm nut to specified torque.
Rear axle nut torque:
68 N·m (6.9 kgf·m , 50 lbf·ft)
Brake stopper arm nut torque:
10 N·m (1.0 kgf·m , 7 lbf·ft)
3. Adjust the brake (page 26) and drive chain (page 84).
4. After installing the wheel, apply the brake several times and check for free wheel rotation when released.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

A used cotter pin may not effectively secure a fastener. Always replace a used cotter pin with a new one.

