



BRAKE SHOE WEAR

Refer to the Safety Precautions on page 65 .

(Type I)

The front and rear brakes are equipped with brake wear indicators.


(Type II)

The rear brake is equipped with a brake wear indicator.


When the brake is applied, an arrow (1) attached to the brake arm (2) moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced. See your dealer for this service.

When the brake service is necessary, see your dealer. Use only Honda Genuine Parts or its equivalent.

< FRONT BRAKE > (Type I)

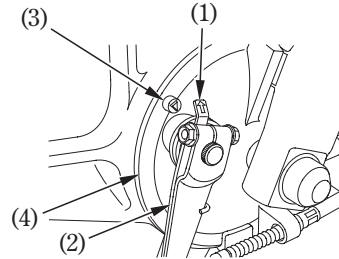

< REAR BRAKE >

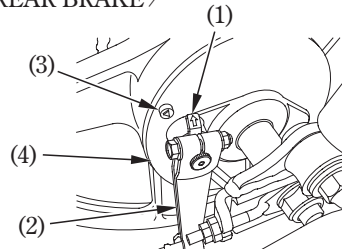

- (1) Arrow
- (2) Brake arm
- (3) Reference mark
- (4) Brake panel

