

## Air Temperature Meter


Air temperature meter (1) shows air temperature digitally.

To select the Air temperature mode, push the left control button (2).

## Temperature Display

Below $-10^{\circ}\text{C}$	"--" is displayed.
Between $-10^{\circ}\text{C}$ and $50^{\circ}\text{C}$	Actual air temperature is indicated.
Above $50^{\circ}\text{C}$	The display will remain " $50^{\circ}\text{C}$ ".

The temperature sensor is located in the meter. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from the surrounding traffic. This can cause the temperature reading not to be correct when your speed is under 30 km/h (19 mph).

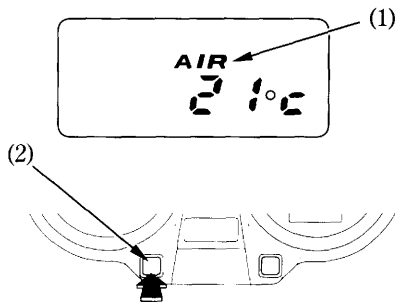

- (1) Air temperature meter
- (2) Left control button