

Rear Suspension

Rebound Damping:

To reduce (SOFT) :


Turn the adjuster toward SOFT (S) for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster toward HARD (H) for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) counter-clockwise until it will no longer turn. This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned clockwise approximately 10 clicks.

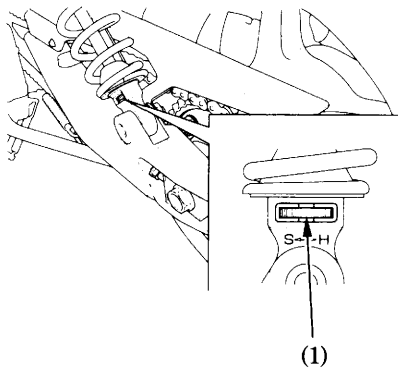

(1) Damping adjuster