


AIR CLEANER

Refer to the Safety Precautions on page 110 .


The air cleaner should be serviced at regular intervals (page 112). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the right side cover (page 86).
2. Remove the attaching screws (1) and air cleaner housing cover (2).

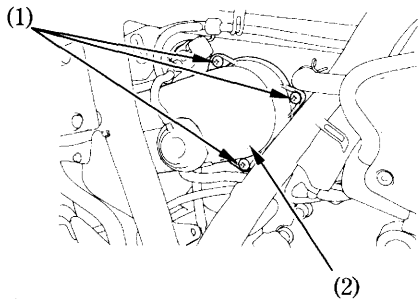

- (1) Attaching screws
- (2) Air cleaner housing cover

3. Pull out the air cleaner (3) and clean the air cleaner using compressed air from the outside, or replace it if necessary.
4. Install the air cleaner.
5. Install the removed parts in reverse order of removal.

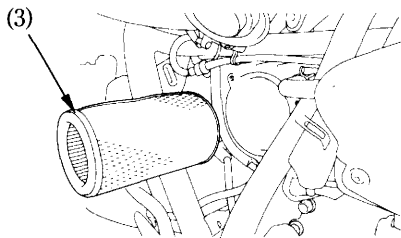

- (3) Air cleaner