



## Mileage Countdown

In this mode, the mileage will be subtracted from the preset figure. When the mileage exceeds the preset figure, the numeric will flash.

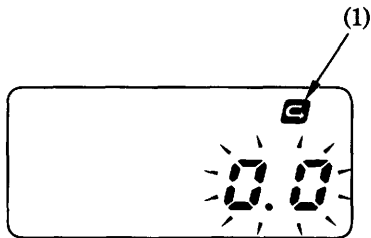

## How to set distance:

1. Turn the ignition switch ON.
2. Select the mileage countdown.
3. Press and hold the left control button (2) for more than 2 seconds.
  - Display will change to the set distance mode or reset to the initial setting. See following Example page.

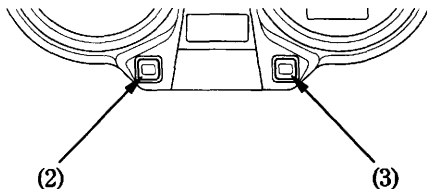

- (1) Mileage countdown display
- (2) Left control button
- (3) Right control button