

## **SIDE COVER**

The right side cover must be removed for the air cleaner maintenance. The left side cover must be removed for fuse maintenance.


The right and left side covers can be removed in the same manner.

### **Removal:**

1. Remove the seat (page 79).
2. Remove the bolt (1).
3. Remove the prongs (2) from the grommets (3).

### **Installation:**

1. Position the cover so the prong is aligned with the frame grommet.
2. Push the prong in.
3. Install the bolt.
4. Install the seat.

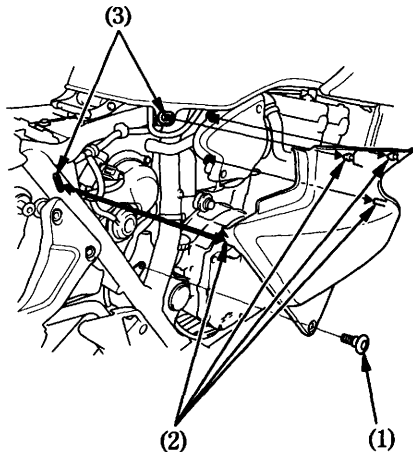

- (1) Bolt  
(2) Prongs  
(3) Grommets