


## Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support block under the engine.  
**(BR type only)**

Place the motorcycle on its center stand.


2. Loosen the rear axle nut (1).
3. Loosen the lock nut (2) and adjusting bolt (3).
4. Remove the rear axle nut and washer.
5. Remove the drive chain (4) from the driven sprocket by pushing the rear wheel forward.

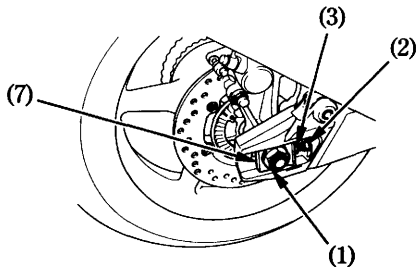

- |                   |                              |
|-------------------|------------------------------|
| (1) Rear axle nut | (3) Adjusting bolt           |
| (2) Lock nut      | (7) Right chain adjust plate |

6. Remove the rear axle shaft (5), rear wheel, left chain adjust plate (6), right chain adjust plate (7) and side collars from the swingarm.

Do not depress the brake pedal while the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

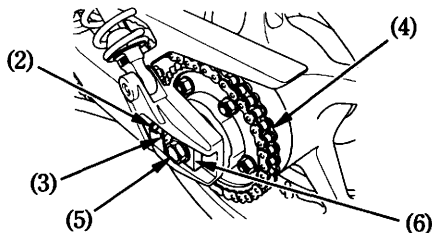

- |                 |                             |
|-----------------|-----------------------------|
| (4) Drive chain | (6) Left chain adjust plate |
| (5) Axle shaft  |                             |