

Removing & Installing Body Components ▶ Clip

Clip

The clip must be removed to remove the headlight assembly.

Maintenance

Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.



Installation

1. Push the bottom of the centre pin.
2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.