

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 75	<b>Electrical Trouble</b> .....	P. 86
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 76	Battery Goes Dead .....	P. 86
<b>Warning Indicators On or Flashing</b> .....	P. 77	Burned-out Light Bulb .....	P. 86
PGM-FI (Programmed Fuel Injection)		Blown Fuse .....	P. 90
Malfunction Indicator Lamp (MIL) .....	P. 77		
ABS (Anti-lock Brake System) Indicator .....	P. 77		
<b>Other Warning Indications</b> .....	P. 78		
Fuel Gauge Failure Indication .....	P. 78		
<b>Tyre Puncture</b> .....	P. 79		